
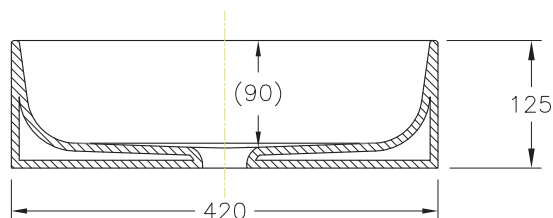


安装尺寸



Rough-In Dimensions:

单位: mm

Unit: mm

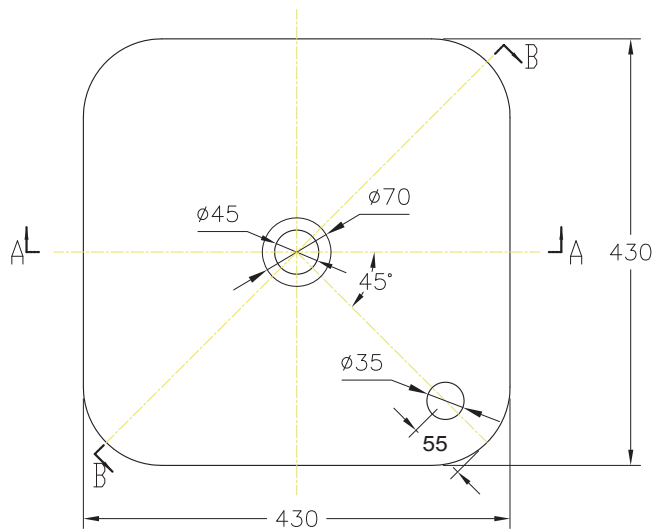

A-A

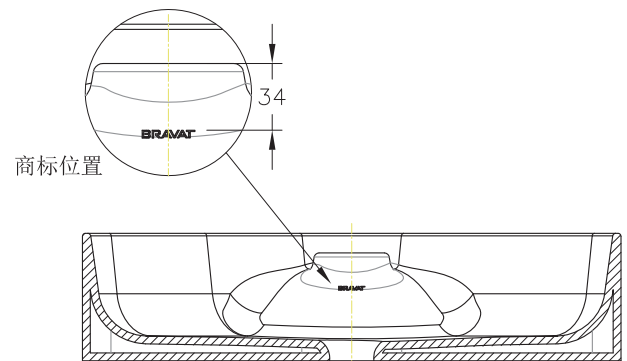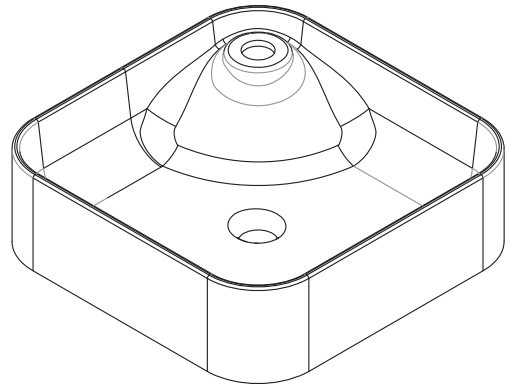

B-B

要了解更多信息，请仔细阅读产品说明书。本公司将持续改进产品设计并保留对其的修改权，恕不另行通知。

Please read the instruction manual for more details. Bravat pursues a policy of continuing improvement on products design and performance, right are reserved to change those dimensions without notice.